


MODEL: 32483ORB

PACKING DIAGRAM

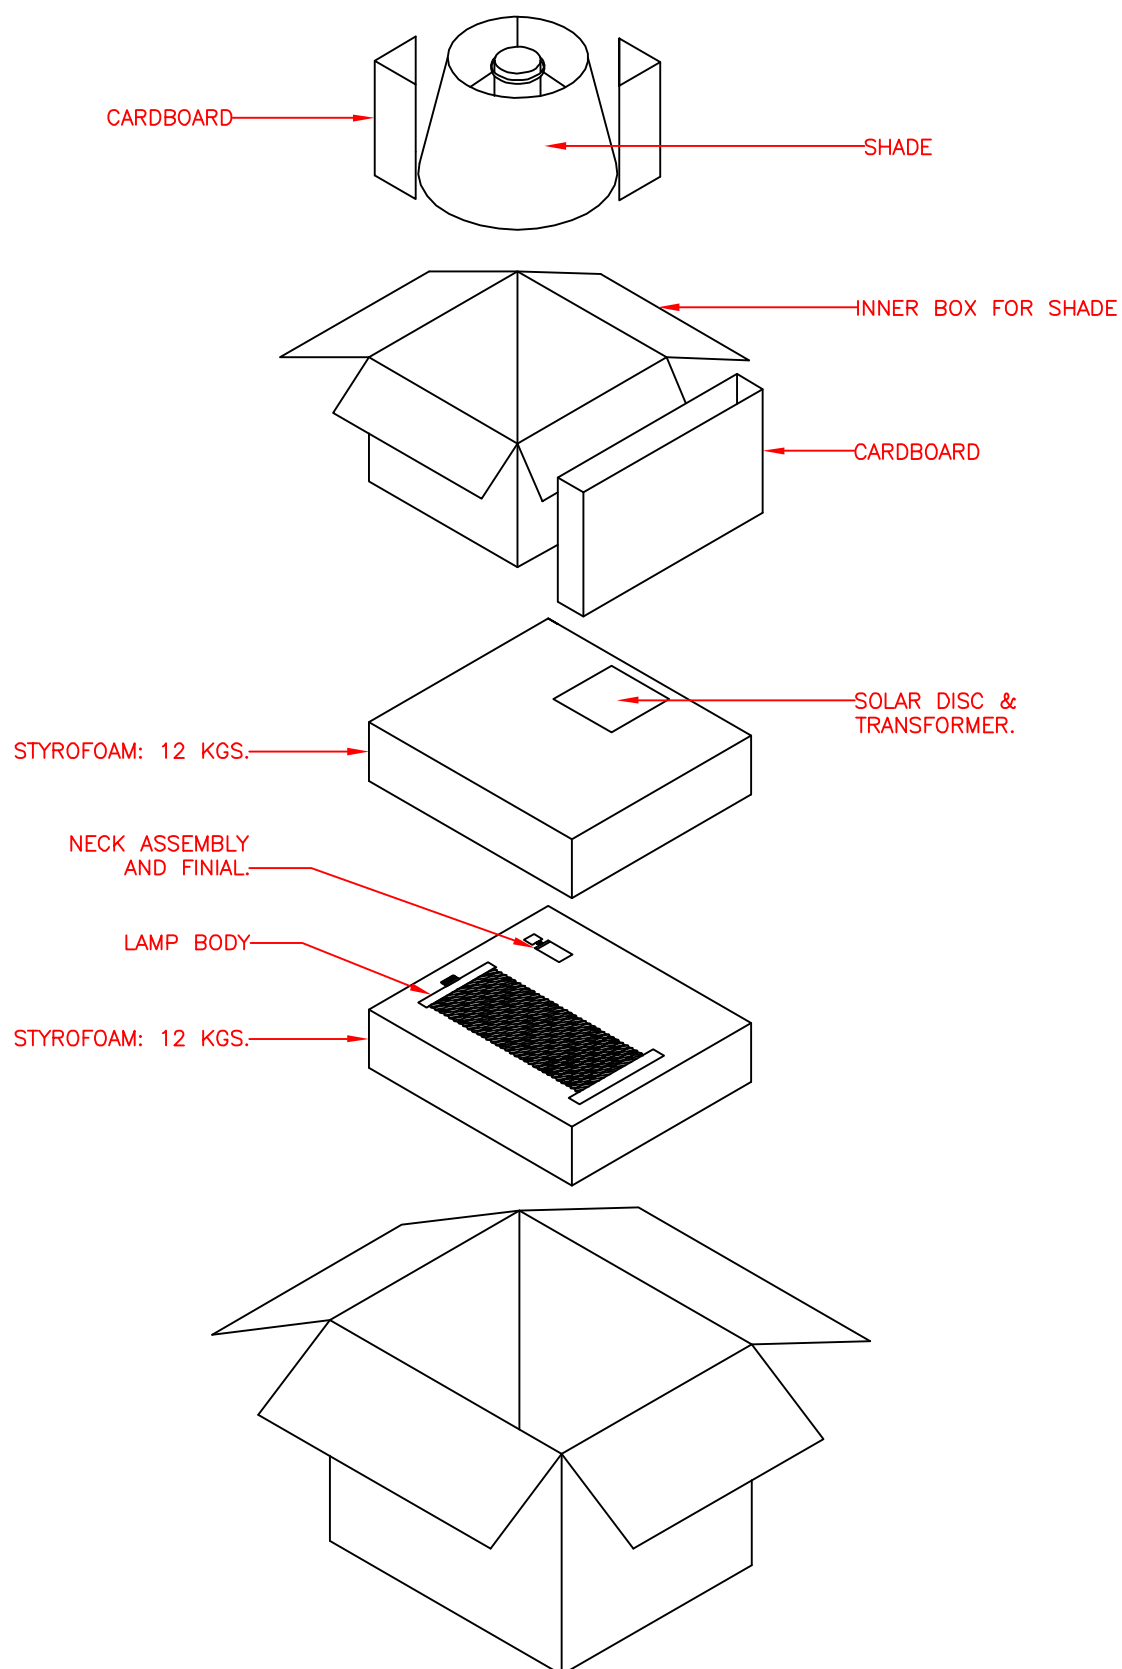

ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

READ INSTRUCTIONS ALL THE WAY THROUGH PRIOR TO ASSEMBLY.
THIS LAMP SHOULD TAKE APPROXIMATELY 5 MINUTES TO ASSEMBLE.
MAKE SURE ALL PARTS ARE FIRMLY TIGHTENED.

UNPACK THE LAMP

YOU SHOULD HAVE RECEIVED THE FOLLOWING PARTS IN THE PACKAGE: SOLAR DISC, SHADE, FINIAL, NECK, LAMP BODY AND TRANSFORMER. TO PROTECT THE FINISH, PLACE ALL PARTS ON A SOFT SURFACE.

ASSEMBLE THE LAMP

1. SCREW THE NECK TO TOP OF THE LAMP BODY.
2. PLACE THE SHADE OVER THE NIPPLE ON TOP OF THE NECK AND SECURE WITH THE FINIAL.
3. PLACE THE SOLAR DISC INTO THE SOLAR DISC HOLDER.

IF OPTIONAL TRANSFORMER IS BEING USED, PLEASE SEE INSTRUCTIONS AS BELOW.

1. INSERT THE CONNECTOR INTO THE INPUT JACK ON BOTTOM OF THE SOLAR DISC.
2. PLUG THE TRANSFORMER INTO A SOCKET AND TURN ON AT SWITCH, YOUR LAMP IS READY FOR USE.
3. IF YOUR LED LIGHT DOES NOT WORK, CHECK THE CONNECTOR IS INSERTED INTO THE INPUT JACK.
4. IF THE LED LIGHT STILL DOES NOT WORK, PLEASE CONTACT YOUR DISTRIBUTOR OR PLACE OF PURCHASE.

IF OPTIONAL TRANSFORMER IS NOT DESIRED, PLEASE SEE INSTRUCTIONS AS BELOW.

1. ALTHOUGH THERE MAY BE SOME INITIAL CHARGE IN BATTERIES, WE RECOMMEND FULLY CHARGING IT BEFORE FIRST USE. TURN OFF THE LED LIGHT AND LEAVE THE SOLAR DISC IN GOOD SUNLIGHT FOR 22 HOURS TO ENSURE THE BATTERIES ARE FULLY CHARGED. THE OTHER OPTION IS USE THE TRANSFORMER TO CHARGE THE BATTERIES FOR 4 HOURS BEFORE FIRST USE.
2. THE FULL RUN TIME OF THE LED LIGHT IS 6 HOURS WHEN THE BATTERIES ARE FULLY CHARGED.
3. TO GET BEST PERFORMANCE FROM THE SOLAR DISC IN THE SUNSHINE, PLEASE MAKE SURE THAT YOU PERIODICALLY CLEAN THE TOP SURFACE OF THE SOLAR DISC (DO NOT USE A CHEMICAL SOLVENT).
4. TURN ON THE LED LIGHT AT SWITCH, YOUR LAMP IS READY FOR USE.
5. IF YOUR LED LIGHT DOES NOT WORK, CHECK THE SOLAR DISC IS RECEIVING SUNLIGHT DIRECTLY AND NOT IN SHADOW.
6. IF THE LED LIGHT STILL DOES NOT WORK, PLEASE CONTACT YOUR DISTRIBUTOR OR PLACE OF PURCHASE.

CLEANING THE SHADE

WASH THE SHADE WITH A SOFT BRUSH AND MILD DETERGENT (SUCH AS DISHWASHING SOAP) AND THEN THOROUGHLY RINSED.

BATTERY INFORMATION:

* RECHARGABLE BATTERIES BECOME LESS EFFICIENT WITH REPEATED CHARGE AND DISCHARGE CYCLES, THE CAPACITY OF THE BATTERIES MAY REDUCE OVER TIME. IF YOU FIND THAT THE BATTERIES APPEAR LESS EFFICIENT, TRY TO BOOST CHARGE IT. TO DO THIS, TURN OFF THE LED LIGHT, USE THE TRANSFORMER TO CHARGE THE BATTERIES FOR 4 HOURS. WE RECOMMEND THAT YOU DO THIS OCCASIONALLY TO HELP PROLONG THE LIFE OF BATTERIES. IF YOUR BATTERIES STILL DOES NOT WORK WELL AFTER THIS BOOST CHARGE, YOU SHOULD REPLACE THE BATTERIES.

** AFTER THE BATTERIES USED FOR 12~18 MONTHS, IT MAY HAVE REACHED IT'S SERVICE LIFE, YOU SHOULD REPLACE THE BATTERY.

